



# Airport Handling Manual

Effective 1 January—31 December 2018



**38<sup>th</sup>** | Edition

## NOTICE

DISCLAIMER. The information contained in this publication is subject to constant review in the light of changing government requirements and regulations. No subscriber or other reader should act on the basis of any such information without referring to applicable laws and regulations and/or without taking appropriate professional advice. Although every effort has been made to ensure accuracy, the International Air Transport Association shall not be held responsible for any loss or damage caused by errors, omissions, misprints or misinterpretation of the contents hereof. Furthermore, the International Air Transport Association expressly disclaims any and all liability to any person or entity, whether a purchaser of this publication or not, in respect of anything done or omitted, and the consequences of anything done or omitted, by any such person or entity in reliance on the contents of this publication.

Opinions expressed in advertisements appearing in this publication are the advertiser's opinions and do not necessarily reflect those of IATA. The mention of specific companies or products in advertisement does not imply that they are endorsed or recommended by IATA in preference to others of a similar nature which are not mentioned or advertised.

© International Air Transport Association. All Rights Reserved. No part of this publication may be reproduced, recast, reformatted or transmitted in any form by any means, electronic or mechanical, including photocopying, recording or any information storage and retrieval system, without the prior written permission from:

Senior Vice President  
Airport, Passenger, Cargo and Security  
International Air Transport Association  
800 Place Victoria  
P.O. Box 113  
Montreal, Quebec  
CANADA H4Z 1M1

# TABLE OF CONTENTS

	Page
<b>Preface</b> .....	xv
<b>Introduction</b> .....	xvii
<b>General</b> .....	1
AHM 001 Chapter 0—Record of Revisions .....	1
AHM 011 Standard Classification and Numbering for Members Airport Handling Manuals .....	2
AHM 012 Office Function Designators for Airport Passenger and Baggage Handling .....	30
AHM 020 Guidelines for the Establishment of Airline Operators Committees .....	31
AHM 021 Guidelines for Establishing Aircraft Ground Times.....	34
AHM 050 Aircraft Emergency Procedures.....	35
AHM 070 E-Invoicing Standards.....	53
<b>Chapter 1—PASSENGER HANDLING</b> .....	91
AHM 100 Chapter 1—Record of Revisions .....	91
AHM 110 Involuntary Change of Carrier, Routing, Class or Type of Fare .....	92
AHM 112 Denied Boarding Compensation.....	98
AHM 120 Inadmissible Passengers and Deportees .....	99
AHM 140 Items Removed from a Passenger's Possession by Security Personnel.....	101
AHM 141 Hold Loading of Duty-Free Goods.....	102
AHM 170 Dangerous Goods in Passenger Baggage .....	103
AHM 176 Recommendations for the Handling of Passengers with Reduced Mobility (PRM) .....	105
AHM 176A Acceptance and Carriage of Passengers with Reduced Mobility (PRM) .....	106
AHM 180 Carriage of Passengers with Communicable Diseases.....	114
AHM 181 General Guidelines for Passenger Agents in Case of Suspected Communicable Disease.....	115
<b>Chapter 2—BAGGAGE HANDLING</b> .....	117
AHM 200 Chapter 2—Record of Revisions .....	117
AHM 210 Local Baggage Committees.....	118
AHM 211 Airport Operating Rules .....	124

**Chapter 2—BAGGAGE HANDLING (continued)**

AHM 212	Interline Connecting Time Intervals—Passenger and Checked Baggage .....	126
AHM 213	Form of Interline Baggage Tags .....	128
AHM 214	Use of the 10 Digit Licence Plate .....	135
AHM 215	Found and Unclaimed Checked Baggage .....	136
AHM 216	On-Hand Baggage Summary Tag .....	138
AHM 217	Forwarding Mishandled Baggage .....	139
AHM 218	Dangerous Goods in Passengers' Baggage .....	141
AHM 219	Acceptance of Firearms and Other Weapons and Small Calibre Ammunition.....	142
AHM 221	Acceptance of Power Driven Wheelchairs or Other Battery Powered Mobility Aids as Checked Baggage .....	143
AHM 222	Passenger/Baggage Reconciliation Procedures .....	144
AHM 223	Licence Plate Fallback Sortation Tags .....	151
AHM 224	Baggage Taken in Error .....	154
AHM 225	Baggage Irregularity Report.....	156
AHM 226	Tracing Unchecked Baggage and Handling Damage to Checked and Unchecked Baggage .....	159
AHM 230	Baggage Theft and Pilferage Prevention.....	161
AHM 231	Carriage of Carry-On Baggage.....	164
AHM 232	Handling of Security Removed Items .....	168
AHM 240	Baggage Codes for Identifying ULD Contents and/or Bulk-Loaded Baggage .....	169

**Chapter 3—CARGO/MAIL HANDLING .....**

AHM 300	Chapter 3—Record of Revisions .....	171
AHM 310	Preparation for Loading of Cargo .....	172
AHM 311	Securing of Load.....	174
AHM 312	Collection Sacks and Bags.....	177
AHM 320	Handling of Damaged Cargo .....	178
AHM 321	Handling of Pilfered Cargo .....	179
AHM 322	Handling Wet Cargo .....	180
AHM 330	Handling Perishable Cargo.....	182
AHM 331	Handling and Protection of Valuable Cargo .....	184
AHM 332	Handling and Stowage of Live Animals.....	188
AHM 333	Handling of Human Remains.....	190

**Chapter 3—CARGO/MAIL HANDLING (continued)**

AHM 340	Acceptance Standards for the Interchange of Transferred Unit Load Devices .....	191
AHM 345	Handling of Battery Operated Wheelchairs/Mobility AIDS as Checked Baggage .....	197
AHM 350	Mail Handling .....	199
AHM 351	Mail Documents .....	203
AHM 353	Handling of Found Mail.....	218
AHM 354	Handling of Damaged Mail .....	219
AHM 355	Mail Security .....	220
AHM 356	Mail Safety .....	221
AHM 357	Mail Irregularity Message.....	222
AHM 360	Company Mail.....	224
AHM 380	Aircraft Documents Stowage .....	225
AHM 381	Special Load—Notification to Captain (General).....	226
AHM 382	Special Load—Notification to Captain (EDP Format and NOTOC Service) .....	231
AHM 383	Special Load—Notification to Captain (EDP NOTOC Summary).....	243
AHM 384	NOTOC Message (NTM).....	246

**Chapter 4—AIRCRAFT HANDLING AND LOADING .....** 251

AHM 400	Chapter 4—Record of Revisions .....	251
AHM 411	Provision and Carriage of Loading Accessories.....	252
AHM 420	Tagging of Unit Load Devices .....	253
AHM 421	Storage of Unit Load Devices .....	263
AHM 422	Control of Transferred Unit Load Devices .....	268
AHM 423	Unit Load Device Stock Check Message .....	273
AHM 424	Unit Load Device Control Message .....	275
AHM 425	Continued Airworthiness of Unit Load Devices .....	279
AHM 426	ULD Buildup and Breakdown .....	283
AHM 427	ULD Transportation .....	292
AHM 430	Operating of Aircraft Doors.....	295
AHM 431	Aircraft Ground Stability—Tipping .....	296
AHM 440	Potable Water Servicing .....	297
AHM 441	Aircraft Toilet Servicing.....	309

**Chapter 4—AIRCRAFT HANDLING AND LOADING (continued)**

AHM 450	Standardisation of Gravity Forces against which Load must be Restrained .....	310
AHM 451	Technical Malfunctions Limiting Load on Aircraft .....	311
AHM 453	Handling/Bulk Loading of Heavy Items.....	312
AHM 454	Handling and Loading of Big Overhang Items.....	313
AHM 455	Non CLS Restrained ULD .....	316
AHM 460	Guidelines for Turnround Plan.....	323
AHM 462	Safe Operating Practices in Aircraft Handling .....	324
AHM 463	Safety Considerations for Aircraft Movement Operations .....	337
AHM 465	Foreign Object Damage (FOD) Prevention Program .....	340

**Chapter 5—LOAD CONTROL .....**

AHM 500	Chapter 5—Record of Revisions .....	343
AHM 501	Terms and Definitions.....	345
AHM 503	Recommended Requirements for a New Departure Control System.....	351
AHM 504	Departure Control System Evaluation Checklist.....	356
AHM 505	Designation of Aircraft Holds, Compartments, Bays and Cabin.....	362
AHM 510	Handling/Load Information Codes to be Used on Traffic Documents and Messages.....	368
AHM 513	Aircraft Structural Loading Limitations.....	377
AHM 514	EDP Loading Instruction/Report .....	388
AHM 515	Manual Loading Instruction/Report.....	404
AHM 516	Manual Loadsheets .....	416
AHM 517	EDP Loadsheets .....	430
AHM 518	ACARS Transmitted Loadsheets.....	439
AHM 519	Balance Calculation Methods .....	446
AHM 520	Aircraft Equipped with a CG Targeting System.....	451
AHM 530	Weights for Passengers and Baggage .....	452
AHM 531	Procedure for Establishing Standard Weights for Passengers and Baggage.....	453
AHM 533	Passengers Occupying Crew Seats .....	459
AHM 534	Weight Control of Load .....	460
AHM 536	Equipment in Compartments Procedure .....	461
AHM 537	Ballast.....	466

**Chapter 5—LOAD CONTROL (continued)**

AHM 540	Aircraft Unit Load Device—Weight and Balance Control .....	467
AHM 550	Pilot in Command's Approval of the Loadsheet.....	468
AHM 551	Last Minute Changes on Loadsheet.....	469
AHM 561	Departure Control System, Carrier's Approval Procedures.....	471
AHM 562	Semi-Permanent Data Exchange Message (DEM).....	473
AHM 564	Migration from AHM 560 to AHM 565 .....	480
AHM 565	EDP Semi-Permanent Data Exchange for New Generation Departure Control Systems.....	500
AHM 570	Automated Information Exchange between Check-in and Load Control Systems.....	602
AHM 571	Passenger and Baggage Details for Weight and Balance Report (PWR).....	608
AHM 580	Unit Load Device/Bulk Load Weight Statement .....	613
AHM 581	Unit Load Device/Bulk Load Weight Signal .....	615
AHM 583	Loadmessage .....	619
AHM 587	Container/Pallet Distribution Message.....	623
AHM 588	Statistical Load Summary .....	628
AHM 590	Load Control Procedures and Loading Supervision Responsibilities.....	631
AHM 591	Weight and Balance Load Control and Loading Supervision Training and Qualifications .....	635

**Chapter 6—MANAGEMENT AND SAFETY .....** 641

AHM 600	Chapter 6—Record of Revisions .....	641
AHM 610	Guidelines for a Safety Management System .....	642
AHM 611	Airside Personnel: Responsibilities, Training and Qualifications.....	657
AHM 612	Airside Performance Evaluation Program .....	664
AHM 615	Quality Management System.....	683
AHM 616	Human Factors Program .....	715
AHM 619	Guidelines for Producing Emergency Response Plan(s) .....	731
AHM 620	Guidelines for an Emergency Management System .....	733
AHM 621	Security Management.....	736
AHM 633	Guidelines for the Handling of Emergencies Requiring the Evacuation of an Aircraft During Ground Handling .....	743
AHM 650	Ramp Incident/Accident Reporting .....	745
AHM 652	Recommendations for Airside Safety Investigations .....	750
AHM 660	Carrier Guidelines for Calculating Aircraft Ground Accident Costs.....	759

<b>Chapter 7—AIRCRAFT MOVEMENT CONTROL .....</b>	<b>761</b>
AHM 700 Chapter 7—Record of Revisions .....	761
AHM 710 Standards for Message Formats .....	762
AHM 711 Standards for Message Corrections .....	764
AHM 730 Codes to be Used in Aircraft Movement and Diversion Messages .....	765
AHM 731 Enhanced Reporting on ATFM Delays by the Use of Sub Codes.....	771
AHM 780 Aircraft Movement Message.....	774
AHM 781 Aircraft Diversion Message.....	786
AHM 782 Fuel Monitoring Message .....	790
AHM 783 Request Information Message.....	795
AHM 784 Gate Message .....	797
AHM 785 Aircraft Initiated Movement Message (MVA).....	802
AHM 790 Operational Aircraft Registration (OAR) Message.....	807
<b>Chapter 8—GROUND HANDLING AGREEMENTS .....</b>	<b>811</b>
AHM 800 Chapter 8—Record of Revisions .....	811
AHM 801 Introduction to and Comments on IATA Standard Ground Handling Agreement (SGHA).....	812
AHM 803 Service Level Agreement Example .....	817
AHM 810 IATA Standard Ground Handling Agreement .....	828
AHM 811 Yellow Pages .....	871
AHM 813 Truck Handling.....	872
AHM 815 Standard Transportation Documents Service Main Agreement .....	873
AHM 817 Standard Training Agreement.....	887
AHM 830 Ground Handling Charge Note .....	891
AHM 840 Model Agreement for Electronic Data Interchange (EDI).....	894
<b>Chapter 9—AIRPORT HANDLING GROUND SUPPORT EQUIPMENT SPECIFICATIONS .....</b>	<b>911</b>
AHM 900 Chapter 9—Record of Revisions .....	911
AHM 901 Functional Specifications .....	914
AHM 904 Aircraft Servicing Points and System Requirements .....	915
AIRBUS A300 B2 320-/B4/C4.....	917
A300F4-600/-600C4 .....	920
A310-200/200C/300.....	926
A318 .....	930
A319 .....	933



	Page
<b>Chapter 9—AIRPORT HANDLING GROUND SUPPORT EQUIPMENT SPECIFICATIONS <i>(continued)</i></b>	
<b>AHM 904 Aircraft Doors, Servicing Points and System Requirements for the Use of Ground Support Equipment <i>(continued)</i></b>	
A320 .....	936
A321 .....	940
A330-200F .....	943
A330-300 .....	948
A340-200 .....	951
A340-300 .....	955
A340-500 .....	959
A340-600 .....	962
Airbus 350 900 passenger .....	965
AIRBUS A380-800/-800F .....	996
ATR42 100/200 .....	999
ATR72 .....	1000
AVRO RJ70 .....	1001
AVRO RJ85 .....	1002
AVRO RJ100 .....	1003
B727-200 .....	1004
B737-200/200C .....	1008
B737-300, 400, -500 .....	1010
B737-400 .....	1013
B737-500 .....	1015
B737-600, -700, -700C .....	1017
B737-700 .....	1020
B737-800 .....	1022
B737-900 .....	1026
B747-100 SF/200C/200F .....	1028
B747-400/400C .....	1030
B757-200 .....	1038
B757-300 .....	1040

**Chapter 9—AIRPORT HANDLING GROUND SUPPORT EQUIPMENT SPECIFICATIONS *(continued)***  
**AHM 904 Aircraft Doors, Servicing Points and System Requirements for the Use of Ground Support Equipment *(continued)***

B767—200/200 ER .....	1041
B767—300/300 ER .....	1044
B767—400 ER .....	1048
B777—200/200 LR .....	1051
B777—300/300 ER .....	1055
Boeing 787 800 passenger .....	1059
BAe ATP (J61) .....	1067
Bombardier CS100 .....	1068
Bombardier CS300 .....	1072
CL-65 (CRJ 100/200) .....	1076
DC8—40/50 F SERIES .....	1077
DC8—61/61 F .....	1079
DC8—62/62 F .....	1081
DC8—63/63 F .....	1083
DC9—15/21 .....	1085
DC9—32 .....	1086
DC9—41 .....	1087
DC9—51 .....	1088
DC10—10/10 CF .....	1089
DC10—30/40, 30/40 CF .....	1091
EMBRAER EMB-135 Regional Models .....	1092
EMBRAER EMB-145 Regional Models .....	1094
Embraer 170 .....	1096
Embraer 175 .....	1098
Embraer 190 .....	1100
Embraer 195 .....	1102
FOKKER 50 (F27 Mk 050) .....	1104
FOKKER 50 (F27 Mk 0502) .....	1106

	Page
<b>Chapter 9—AIRPORT HANDLING GROUND SUPPORT EQUIPMENT SPECIFICATIONS <i>(continued)</i></b>	
<b>AHM 904 Aircraft Doors, Servicing Points and System Requirements for the Use of Ground Support Equipment <i>(continued)</i></b>	
FOKKER 70 (F28 Mk 0070) .....	1108
FOKKER 100 (F28 Mk 0100) .....	1110
FOKKER 100 (F28 Mk 0100) .....	1112
IL-76T .....	1114
MD-11 .....	1116
MD-80 SERIES .....	1118
SAAB 2000 .....	1119
SAAB SF-340 .....	1120
TU-204 .....	1122
AHM 905 Reference Material for Civil Aircraft Ground Support Equipment .....	1125
AHM 905A Cross Reference of IATA Documents with SAE, CEN, and ISO .....	1129
AHM 909 Summary of Unit Load Device Capacity and Dimensions .....	1131
AHM 910 Basic Requirements for Aircraft Ground Support Equipment .....	1132
AHM 911 Ground Support Equipment Requirements for Compatibility with Aircraft Unit Load Devices .....	1136
AHM 912 Standard Forklift Pockets Dimensions and Characteristics for Forkliftable General Support Equipment .....	1138
AHM 913 Basic Safety Requirements for Aircraft Ground Support Equipment .....	1140
AHM 914 Compatibility of Ground Support Equipment with Aircraft Types .....	1145
AHM 915 Standard Controls .....	1147
AHM 916 Basic Requirements for Towing Vehicle Interface (HITCH) .....	1161
AHM 917 Basic Minimum Preventive Maintenance Program/Schedule .....	1162
AHM 920 Functional Specification for Self-Propelled Telescopic Passenger Stairs .....	1164
AHM 920A Functional Specification for Towed Passenger Stairs .....	1167
AHM 921 Functional Specification for Boarding/De-Boarding Vehicle for Passengers with Reduced Mobility (PRM) .....	1169
AHM 922 Basic Requirements for Passenger Boarding Bridge Aircraft Interface .....	1174
AHM 923 Functional Specification for Elevating Passenger Transfer Vehicle .....	1180
AHM 924 Functional Specification for Heavy Item Lift Platform .....	1183
AHM 925 Functional Specification for a Self-Propelled Conveyor-Belt Loader .....	1184
AHM 925A Functional Specification for a Self-Propelled Ground Based in-Plane Loading System for Bulk Cargo .....	1187

**Chapter 9—AIRPORT HANDLING GROUND SUPPORT EQUIPMENT SPECIFICATIONS (continued)**

AHM 925B	Functional Specification for a Towed Conveyor-Belt Loader .....	1190
AHM 926	Functional Specification for Upper Deck Catering Vehicle .....	1193
AHM 927	Functional Specification for Main Deck Catering Vehicle .....	1197
AHM 930	Functional Specification for an Upper Deck Container/Pallet Loader .....	1201
AHM 931	Functional Specification for Lower Deck Container/Pallet Loader .....	1203
AHM 932	Functional Specification for a Main Deck Container/Pallet Loader .....	1206
AHM 933	Functional Specification of a Powered Extension Platform to Lower Deck/Container/ Pallet Loader .....	1209
AHM 934	Functional Specification for a Narrow Body Lower Deck Single Platform Loader.....	1211
AHM 934A	Functional Specification for a Single Platform Slave Loader Bed for Lower Deck Loading Operations .....	1213
AHM 936	Functional Specification for a Container Loader Transporter .....	1215
AHM 938	Functional Specification for a Large Capacity Freighter and Combi Aircraft Tail Stanchion .....	1218
AHM 939	Functional Specification for a Transfer Platform Lift.....	1220
AHM 941	Functional Specification for Equipment Used for Establishing the Weight of a ULD/BULK Load .....	1222
AHM 942	Functional Specification for Storage Equipment Used for Unit Load Devices .....	1224
AHM 950	Functional Specification for an Airport Passenger Bus .....	1225
AHM 951	Functional Specification for a Crew Transportation Vehicle .....	1227
AHM 953	Functional Specifications for a Valuable Cargo Vehicle.....	1229
AHM 954	Functional Specification for an Aircraft Washing Machine .....	1230
AHM 955	Functional Specification for an Aircraft Nose Gear Towbar Tractor.....	1232
AHM 956	Functional Specification for Main Gear Towbarless Tractor.....	1235
AHM 957	Functional Specification for Nose Gear Towbarless Tractor .....	1237
AHM 958	Functional Specification for an Aircraft Towbar .....	1240
AHM 960	Functional Specification for Unit Load Device Transport Vehicle.....	1242
AHM 961	Functional Specification for a Roller System for Unit Load Device Transportation on Trucks .....	1245
AHM 962	Functional Specification for a Rollerised Platform for the Transportation of Twenty Foot Unit Load Devices that Interfaces with Trucks Equipped to Accept Freight Containers Complying with ISO 668:1988 .....	1247
AHM 963	Functional Specification for a Baggage/Cargo Cart .....	1249
AHM 965	Functional Specification for a Lower Deck Container Turntable Dolly .....	1250
AHM 966	Functional Specification for a Pallet Dolly .....	1252

**Chapter 9—AIRPORT HANDLING GROUND SUPPORT EQUIPMENT SPECIFICATIONS (continued)**

AHM 967	Functional Specification for a Twenty Foot Unit Load Device Dolly.....	1254
AHM 968	Functional Specification for Ramp Equipment Tractors .....	1256
AHM 969	Functional Specification for a Pallet/Container Transporter .....	1257
AHM 970	Functional Specification for a Self-Propelled Potable Water Vehicle with Rear or Front Servicing.....	1259
AHM 971	Functional Specification for a Self-Propelled Lavatory Service Vehicle with Rear or Front Servicing.....	1262
AHM 972	Functional Specifications for a Ground Power Unit for Aircraft Electrical System .....	1265
AHM 973	Functional Specification for a Towed Aircraft Ground Heater .....	1269
AHM 974	Functional Specification for Aircraft Air Conditioning (Cooling) Unit .....	1272
AHM 975	Functional Specifications for Self-Propelled Aircraft De-Icing/Anti-Icing Unit.....	1274
AHM 976	Functional Specifications for an Air Start Unit .....	1278
AHM 977	Functional Specification for a Towed De-Icing/Anti-Icing Unit.....	1280
AHM 978	Functional Specification for a Towed Lavatory Service Cart.....	1283
AHM 979	Functional Specification for a Towed Boarding/De-Boarding Device for Passengers with Reduced Mobility (PRM) for Commuter-Type Aircraft .....	1285
AHM 980	Functional Specification for a Self-Propelled Petrol/Diesel Refueling Vehicle for Ground Support Equipment.....	1287
AHM 981	Functional Specification for a Towed Potable Water Service Cart.....	1289
AHM 990	Guidelines for Preventative Maintenance of Aircraft Towbars .....	1291
AHM 994	Criteria for Consideration of the Investment in Ground Support Equipment.....	1292
AHM 995	Basic Unit Load Device Handling System Requirements.....	1296
AHM 997	Functional Specification for Sub-Freezing Aircraft Air Conditioning Unit .....	1298

**Chapter 10—ENVIRONMENTAL SPECIFICATIONS FOR GROUND HANDLING OPERATIONS .....** 1301

AHM 1000	Chapter 10—Record of Revisions .....	1301
AHM 1001	Environmental Specifications for Ground Handling Operations .....	1302
AHM 1002	Environmental Impact on the Use of Ground Support Equipment .....	1303
AHM 1003	GSE Environmental Quality Audit.....	1305
AHM 1004	Guidelines for Calculating GSE Exhaust Emissions.....	1307
AHM 1005	Guidelines for an Environmental Management System .....	1308

**Chapter 11—GROUND OPERATIONS TRAINING PROGRAM .....** 1311

AHM 1100	Chapter 11—Record of Revisions .....	1311
AHM 1110	Ground Operations Training Program .....	1312



<b>Appendix A—References</b> .....	1347
<b>Appendix B—Glossary</b> .....	1379
<b>Alphabetical List of AHM Titles</b> .....	1387
<b>IATA Strategic Partners</b> .....	SP-1